


EXAMPLE OF APPROACH LENGTH OF NEED ON EMBANKMENT (FILL) SLOPES

FIGURE: 8-G

BDC13MR-04

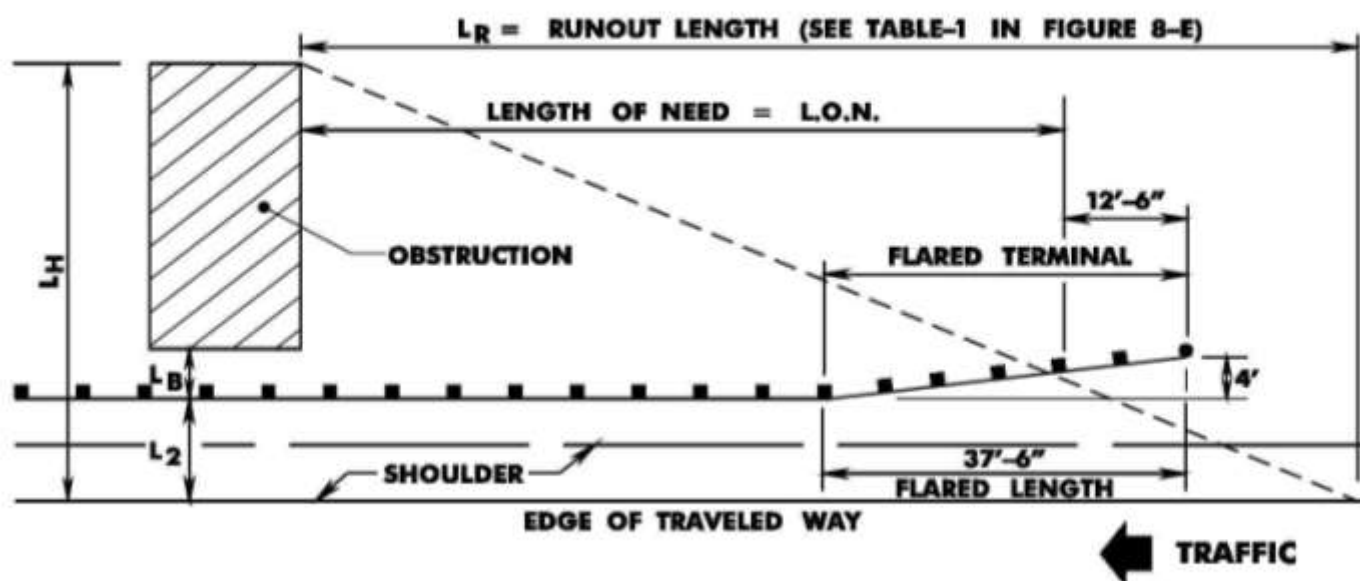

EXAMPLE

DESIGN SPEED = 70 M.P.H.

TANGENT ROADWAY

A.D.T. = 7000

$L_B = 4'$

$L_H = 22'$

$L_R = 330'$

$L_2 = 16'$

STEP 1.
$$L.O.N. = \frac{L_R (L_H - L_2 - 2.7')}{L_H}$$

$$L.O.N. = \frac{330' (22' - 16' - 2.7')}{22'}$$

$$L.O.N. = 49.5'$$

STEP 2. Increase 49.5' to nearest multiple of 12'-6", L.O.N. = 50'.

STEP 3. Add an additional 12'-6" to get required L.O.N. including flare terminal, use L.O.N.-plus-flare terminal = 62.5'.


STEP 4. From Table 1, Figure 8-D and Table 2, Figure 8-E, the minimum length = 75'. Since L.O.N.-plus-flare terminal is less than 75', use 75'.

FIGURE: 8-M

BDC13MR-04

Where an obstruction is encountered in a cut section and it is to be shielded with guide rail, it is desirable that the length of need (L.O.N.) end at the PVI. See Figure 8-N. In order to accomplish this, the length of guide rail (L_1) parallel to the PVI must be obtained. The following example shows how the L.O.N. is computed:

EXAMPLE

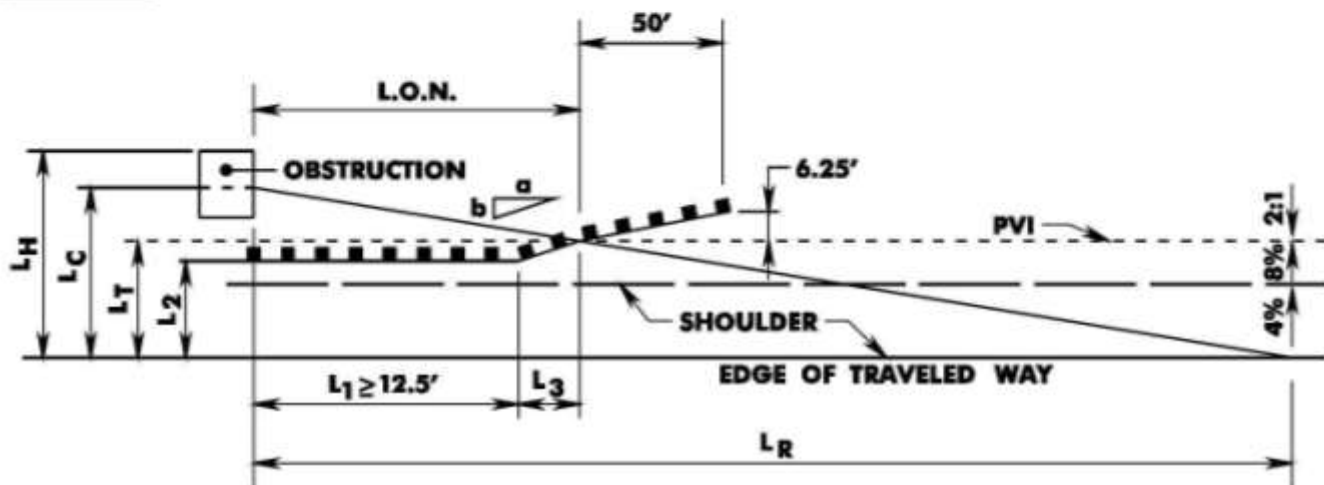

$V = 60$ M.P.H.

A.D.T. = 6,000

$L_2 = 16$ FEET

$L_H = 32$ FEET

$L_R = 250'$ (FROM FIGURE 8-E, TABLE-1)

$L_T = 19$ FEET

$\alpha b = 14:1$ STRAIGHT FLARE (FROM FIGURE 8-E, TABLE-1)

$L_C = 30$ FEET (FROM FIGURE 8-A, $L_C = 26'$ TO $30'$) FOR 8% FILL SLOPE

IF $L_H > L_C$ USE L_C IN FORMULA BELOW, IF $L_H < L_C$, REPLACE L_C WITH L_H IN FORMULA BELOW

$$L_1 = L_R - (L_R L_T / L_C) - \alpha b (L_T - L_2)$$

$$L_1 = 250 - (250 \times 19 / 30) - 141 (19 - 16) = 49.7'$$

$49.7' / 6.25'$ POST SPACING = 7.95 POSTS, THEREFORE, USE 8 POSTS AT $6.25' = 50.0$ FT. = L_1

FLARE LENGTH $L_3 = (L_T - L_2) \alpha b = (19 - 16) 141 = 42$ FT.

$42' / 6.25'$ POST SPACING = 6.72 POSTS, THEREFORE, USE 7 POSTS AT $6.25' = 43.75$ FT. = L_3

L.O.N. = 50.0 FEET + 43.75 FEET = 93.75 FEET

FROM TABLE 1, FIGURE 8-D MINIMUM RECOVERY AREA = $75'$

SINCE L.O.N. IS GREATER THAN $75'$, USE L.O.N. = $93.75'$